

EMMABODA → KARLSKRONA C		
Lutningsförhållande max 13,0 ‰		
Emmaboda – Karlskrona Enkelspår, System H, ATC, (Fjtkl M)		
Km	Sth	Signaler, trafikplatser, mm
293+989	120	Infsi (21)
294+050		Nedkopplingstavla
295+366		Msi (33<1>)
295+384		<u>Emmaboda (Em)</u> * Uppgifter om parkeringsspår se avd E
295+389		Msi (31<2>)
295+451		Msi (61<3>, 63<4>)
295+860	90/115	Hatavla
295+925		Ublsi (Em L71)
296+024		Nedkopplingstavla
296+260		Driftplatsgräns
296+362	160/190	Hatavla
298+098	200	Hatavla
303+170	170/200	Hatavla
305+307	140/160	Hatavla

EM → CK

Km	Sth	Signaler, trafikplatser, mm
305+441	140/160	Infsi (21)
306+070		<u>Vissefjärda (Vfa)</u>
306+164		Msi (23<2>, 25<1>)
306+264		Msi (31<2>, 33<1>)
306+564		Ublsi (Vfa L41)
306+936		Driftplatsgräns
308+155	125/150	Hatavla
310+084	120/150	Hatavla
311+448	160/190	Hatavla
312+381	200	Hatavla
315+427	125/150	Hatavla
316+909	115/140	Hatavla
317+331	135/160	Hatavla
319+132	105/130	Hatavla
319+462	75/95	Hatavla

Km	Sth	Signaler, trafikplatser, mm
319+560	75/95	Infsi (21)
319+837	90/115	Hatavla
320+369		<u>Holmsjö (Hmö)</u>
320+448		Msi (23<2>, 25<1>)
320+548		Msi (31<2>, 33<1>)
320+566		Vsi 12205, Holmsjö
320+800		Ublsi (Hmö L41)
320+900		Driftplatsgräns
321+667	90/110	Hatavla
322+790	75/95	Hatavla
323+114		Vsi 12208, Sillhövda
323+348	110/135	Hatavla
324+245		Vsi 12210, Nävrasjö norra
325+023	85/105	Hatavla
325+406	95/120	Hatavla
326+046		Vsi 12216, Nävragöl

EM → CK

Km	Sth	Signaler, trafikplatser, mm
327+605	95/120 80/95	Hatavla
327+966		Vsi 12220, Kvarnagården
328+700	100/125	Hatavla
329+440		Vsi 12222, Bollasjö
331+555	75/90	Hatavla
332+324	100/125	Hatavla
333+144		Infsi (21)
333+431		Vsi 12228, Spjutsbygd
333+720		<u>Spjutsbygd (Spj)</u>
333+841		Msi (25<1>, 23<2>)
333+941		Msi (33<1>, 31<2>)
334+200		Ublsi (Spj L41)
334+300		Driftplatsgräns

Km	Sth	Signaler, trafikplatser, mm
	100/125	
334+369	95/115	Hatavla
334+999	80/95	Hatavla
335+725	80/100	Hatavla
336+769	80/95	Hatavla
337+481	75/90	Hatavla
337+731	80/95	Hatavla
338+705	110/130	Hatavla
339+717		Vsi 12240, Stationsvägen
340+009	80/95	Hatavla
340+936	120	Hatavla
341+010		Vsi 12242, Mörtövägen
342+694	70/85	Hatavla
343+259	110	Hatavla
343+314		Vsi 12246, Bubbetorp
344+440	85/100	Hatavla
344+756	110/130	Hatavla
345+514		Vsi 12248, Torskors
346+172	110/135	Hatavla

EM ➔ CK

Km	Sth	Signaler, trafikplatser, mm
	110/135	
346+816		Infsi (201)
347+590	60	Hatavla
347+700		<u>Gullberna (Gua) *</u>
347+744		Msi (233<53>)
347+760		Msi (231<54>)
347+810	90	Hatavla <54>
347+860		Msi (243<53>, 241<54>)
347+893	80	Hatavla <53>
348+052		Vsi 12253, Gullbernavägen
348+244		Msi (121)
348+294	80	Hatavla

Km	Sth	Signaler, trafikplatser, mm
348+344	80	Gräns mellan driftplatsdelar
349+081	70	Hatavla
349+712		Bergåsa (Båa), hst
350+148		Msi (131)
351+150	50	Hatavla <41, 42>, kurva
351+364		Msi (139<42>)
351+369		Msi (141<41>)
351+838- 351+843		Tågfärdvägs slutpunkt, stoppbock (<4>, <3>, <2>)
351+904		<u>Karlskrona (Ck) *</u>
351+909		Tågfärdvägs slutpunkt, stoppbock (<1>, <6>)

Reservsida